# Product datasheet Characteristics

# ATS22C21Q

soft starter-ATS22-control 220V-power 230V(55kW)/400...440V(110kW)





#### Main

230440 V - 1510 %	
Start with torque control (current limited to 3.5 ln)	
210 A for connection in the motor supply line for standard applications	
IP00	

### Complementary

Assembly style	With heat sink		
Function available	Internal bypass		
Supply voltage limits	195484 V	90	
Supply frequency	5060 Hz - 1010 %	i.	
Network frequency	4566 Hz		
Device connection	To the motor delta terminals In the motor supply line		
[Uc] control circuit voltage	230 V - 1510 % 50/60 Hz		
Control circuit consumption	20 W	E .	

Discrete output number	2	
Discrete output type	Relay outputs R1 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O Relay outputs R2 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O	
Minimum switching current	100 mA at 12 V DC (relay outputs)	
Maximum switching current	5 A 250 V AC resistive 1 relay outputs 5 A 30 V DC resistive 1 relay outputs 2 A 250 V AC inductive 0.4 20 ms relay outputs 2 A 30 V DC inductive 7 ms relay outputs	
Discrete input number	3	
Discrete input type	(LI1, LI2, LI3) logic, 5 mA 4.3 kOhm	
Discrete input voltage	24 V <= 30 V	
Discrete input logic	Positive logic LI1, LI2, LI3 at State 0: < 5 V and <= 2 mA at State 1: > 11 V, >= 5 mA	
Output current	0.41 lcl adjustable	
PTC probe input	750 Ohm	
Communication port protocol	Modbus	
Connector type	1 RJ45	
Communication data link	Serial	
Physical interface	RS485 multidrop	
Transmission rate	4800, 9600 or 19200 bps	
Installed device	31	
Protection type	Phase failure: line Thermal protection: motor Thermal protection: starter	
Marking	CE	
Type of cooling	Forced convection	
Operating position	Vertical +/- 10 degree	
Height	425 mm	
Width	206 mm	
Depth	299 mm	
Net weight	33 kg	
Motor power range AC-3	55100 kW at 200240 V 3 phases 110220 kW at 380440 V 3 phases	
Motor starter type	Soft starter	

## Environment

Electromagnetic compatibility	Conducted and radiated emissions level A conforming to IEC 60947-4-2 Damped oscillating waves level 3 conforming to IEC 61000-4-12 Electrostatic discharge level 3 conforming to IEC 61000-4-2 Immunity to electrical transients level 4 conforming to IEC 61000-4-4 Immunity to radiated radio-electrical interference level 3 conforming to IEC 61000-4-3 Voltage/current impulse level 3 conforming to IEC 61000-4-5	
Standards	EN/IEC 60947-4-2	
Product certifications	CCC UL GOST CSA C-Tick	
Vibration resistance	1 gn (f= 13200 Hz) conforming to EN/IEC 60068-2-6 1.5 mm (f= 213 Hz) conforming to EN/IEC 60068-2-6	
Shock resistance	15 gn for 11 ms conforming to EN/IEC 60068-2-27	
Noise level	56 dB	
Pollution degree	Level 2 conforming to IEC 60664-1	
Relative humidity	095 % without condensation or dripping water conforming to EN/IEC 60068-2-3	
Ambient air temperature for operation	-1040 °C (without derating) 4060 °C (with current derating 2.2 % per °C)	
Ambient air temperature for storage	-2570 °C	
Operating altitude <= 1000 m without derating > 1000< 2000 m with current derating of 2.2 % per additional 100 m		

# Packing Units

Package 1 Weight	24.500 kg	
Package 1 Height	4.600 dm	
Package 1 width	4.000 dm	
Package 1 Length	6.000 dm	

## Offer Sustainability

Sustainable offer status	Green Premium product		
REACh Regulation	REACh Declaration		
EU RoHS Directive	Pro-active compliance (Product out of EU RoHS legal scope) EU RoHS Declaration		
Mercury free	Yes		
RoHS exemption information	Yes		
China RoHS Regulation	China RoHS declaration		
Environmental Disclosure	Product Environmental Profile		
Circularity Profile	End of Life Information		
WEEE	The product must be disposed on European Union markets following specific waste collection and never end up in rubbish bins		

## Contractual warranty


Warranty	18	8 months	

# Product datasheet Dimensions Drawings

# ATS22C21Q

### Frame Size D

### Dimensions

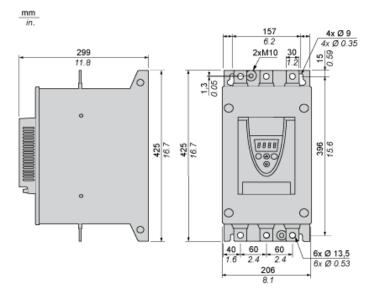

#### **Precautions**

#### Standards

The Altistart 22 soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.

For environment pollution degree 3, install the Altistart 22 soft starter inside a cabinet type 12 or IP54.

### **▲** DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

#### Air Circulation

Leave sufficient free space to help the air required for cooling purposes to circulate from the bottom to the top of the unit.

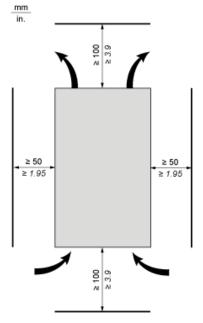

#### Overheating

To avoid the soft starter to overheat, respect the following recommendations:

- Mount the Altistart 22 Soft Starter within ± 10° of vertical.
- Do not locate the Altistart 22 Soft Starter near heat radiating elements.
- Electrical current through the Altistart 22 Soft Starter will result in heat losses that must be dissipated into the ambient air immediately surrounding the soft
- If several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter can as

# Product datasheet Mounting and Clearance


# ATS22C21Q

# Wall mounted or Floor-standing Enclosure with IP 23 Degree of protection


### Introduction

To help proper air circulation in the soft starter, grilles and forced ventilation can be installed.

### Ventilation Grilles

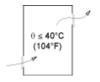



### Forced Ventilation Unit

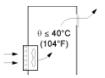

### **Power Terminal**

## Bar Style

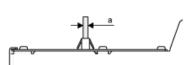

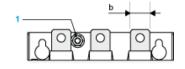


Power supply and output to motor	Bar	b	30 mm (1.18 in)
		а	5 mm (0.2 in)
		Bolt	M12 (0.47 in)
	Cable and protective cover	Size	2 X 150 mm²
		Gauge	2 X 250 MCM
		Protective cover	LA9F703
		Tightening torque	57 N.m
			498.75 lb.in

## Power connections, minimum required wiring section


IEC cable	UL cable
mm² (Cu 70°C/158°F) (1)	AWG (Cu 75°C/167°F) (1)
95	300 MCM

# 230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control

# With Line Contactor, Freewheel or Controlled Stop

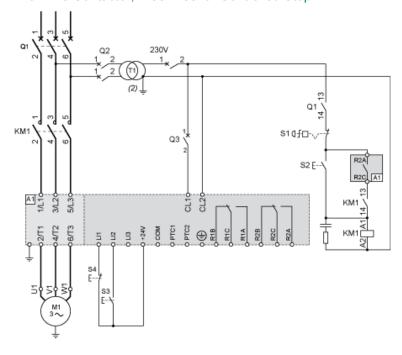

# 230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

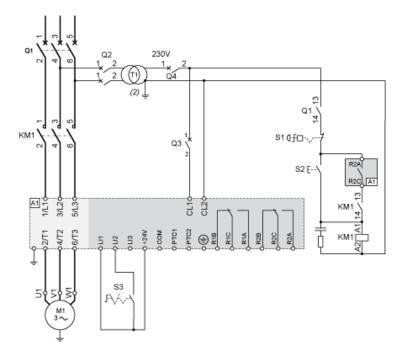



### Connection in the motor delta winding in series with each winding

#### Wiring

ATS22 soft starters connected to motors with the delta connections can be inserted in series in the motor windings.

The following wiring requieres particular attention. It is documented in the Altistart 22 Soft start - soft stop unit user manual. Please contact Schneider Electric commercial organisation for further informations.

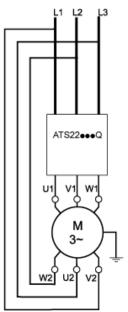

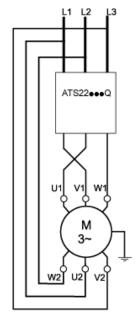


#### Example

A 400 V - 110 kW motor with a line current of 195 A (nominal current for the delta connection). The current in each winding is equal to 195/1.5 or 130 A. The rating is determined by selecting the soft starter with a permanent nominal current (ICL) just above this current.

### Motor Thermal Protection - Cold Curves

#### Curves

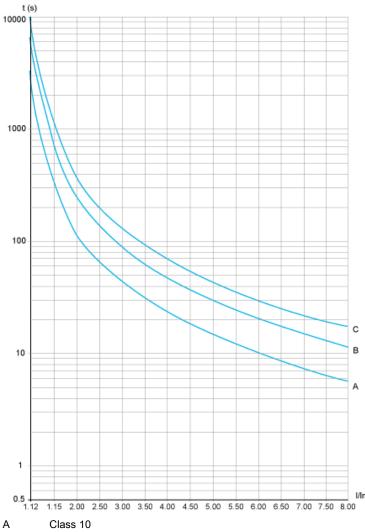

ВС Class 20

Class 30

### Trip time for a Standard Application (Class 10)

3.5 ln 32 s

### Trip time for a Severe Application (Class 20)

3.5 ln


63 s

### Trip time for a Severe Application (Class 30)

3.5 ln	
95 s	

### Motor Thermal Protection - Warm Curves

#### Curves

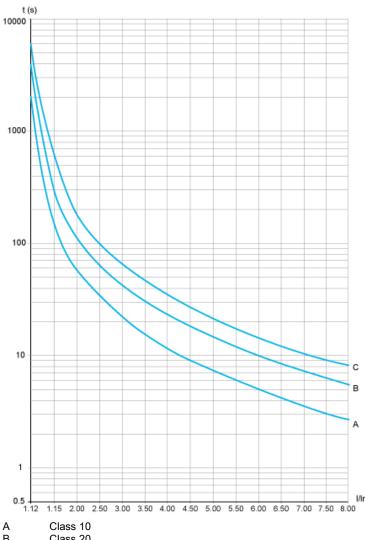

ВС Class 20 Class 30

Trip time for a Standard Application (Class 10)

3.5 ln 16 s

Trip time for a Severe Application (Class 20)

3.5 ln 32 s

## Trip time for a Severe Application (Class 30)

	 `	<u>′</u>
3.5 ln		
48 s		